

OBS!

Dette produktet krever et «Sim kort» som skal sitte i enheten. Sim kortet må være uten pinkode. For å fjerne pinkoden selv, sett simkortet inn i din telefon. Gå til telefoninnstillinger/simkortinnstillinger og deaktiverer sim-pin kode.

**Steg 1:** Åpne forpakningen, ta ut produktet fra emballasjen.

**Steg 2:** Sett inn Sim kortet, **PS: dette passer bare en vei.**

**Steg 3:** Sett i strømadapteret.

**Steg 4:** Ta frem mobiltelefonen/pc din og gå til wifi innstillinger. Deretter velg trådløst nettverk «**WI-TEK\_XXXX**» Tast så passord: «**88888888**».

**Steg 5:** Åpne nettleser og skriv inn følgende adresse «**192.168.1.88**».

**Steg 6:** Skriv inn brukernavn og passord (brukernavn:admin)(passord:admin).

**Steg 7:** Trykk «**next**» på første bilde

**Steg 8:** velg «**4G mode**» deretter trykk next

Select system mode

Please choose to use the 4G routing mode or traffic card or connect the cable to access to Internet, according to your situation.

- ☒ 4G mode  
☐ Router mode  
☐ AP mode

Exit Wizard

Back

Next

**Steg 9:** Her kan du endre WIFI-navn og WIFI-passord, hvis ønskelig.

WiFi

configures the basic configuration of the wireless network. For detailed configuration, manage the WLAN configuration of the wireless configuration.

WiFi ☒ Enabled

WiFi name Wi-Tek\_sikkerheten


Encryption WPA2-PSK

WiFi password .....

Exit Wizard

Back

Finish

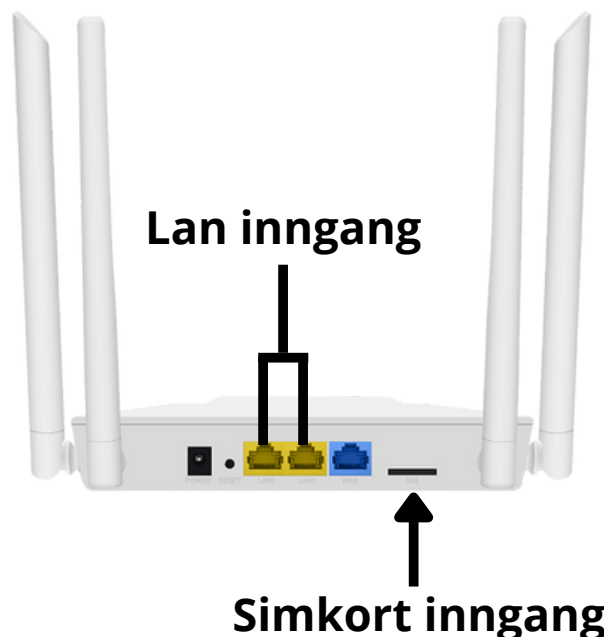

**Steg 10:** Gratulerer du er nå satt opp din nye 4G ruter 😊