




Quick Installation Guide

4G LTE Mobile Wi-Fi

 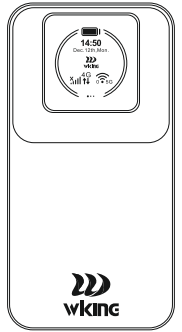


WK-MF5

www.wireless-tek.com

1.Packing Content


• WK-MF5



Mobile Wi-Fi x 1



 Quick Installation Guide x 1




USB-C Cable x 1




3000mAh Battery x 1

2.Appearance Overview

WK-MF5

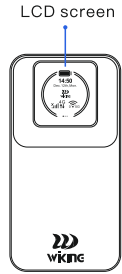


LCD screen

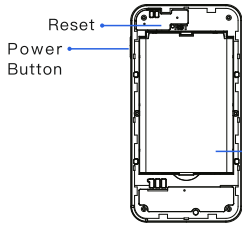

Reset

Power Button

 Battery




USB-C Port(5V 1A Power Input)


3.Device Installation

1.Open the cover and check the preset SSID and wireless password, as shown in the picture below, install the SIM card and the battery.

 1 Remove the back cover.



2 Install your SIM card.

 


SIM card requirement:


- Nano SIM card ✓
- Micro SIM card ✗
- Standard SIM card ✗

① If you have a micro SD card, you can insert it into the SD card slot for storage and media sharing.

3 Install the provided battery.

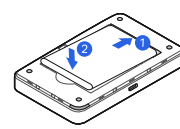


4 Replace the back cover.

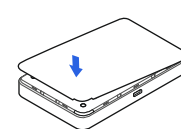

4.How to Charge


Method1

Via a Wall Outlet(Recommended)

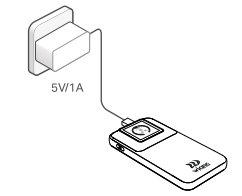

Method2


Via a Computer

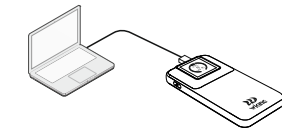

- When ⚡ on the battery icon disappears, the Mobile Wi-Fi is fully charged.
- The power adapter is not included.

5.Connect to the Internet

 1.Press and hold the Power button until the welcome screen appears.



2.To view the SSID and password, click the power button to switch screen pages.

Enjoy the internet!

6.Web Management

1. Connect your wireless device to the Mobile Wi-Fi. If it is a computer, make sure it is set to obtain an IP address automatically.
2. Launch a web browser and visit **192.168.1.1**. Enter the default password **"admin"** to access the web management interface.


7.FAQ (Frequently Asked Questions)

Q1. What should I do if I cannot access the internet (one of the following messages appears on the home screen)?

- A1. PIN Required**
 · Your SIM card is PIN protected. Log in to the web management page(192.168.1.1) on your phone, then enter the PIN provided by your mobile carrier.
- A2. No SIM Card**
 · Power off the Mobile Wi-Fi and reinstall your SIM card.
- A3. No Service**
 · Verify that your SIM card is an LTE SIM card.
 · Verify that your SIM card is in your carrier's service area and has sufficient credit.

Q2. How do I restore the Mobile Wi-Fi to its factory default settings?

- A.** With the Mobile Wi-Fi powered on, remove the cover, then use a pin to press and hold the Reset button for more than 5 seconds.
 Note: Restoring the device to its factory defaults will clear all your settings

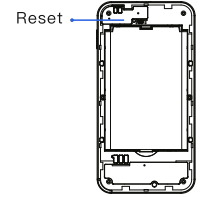

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
 Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com

