

X-SENSE

Act in Advance

深圳市安室智能有限公司

料号	F800004000261	版本号	V1.0
品名	XS01-M_B端挪威定制	设计师	柳圳
材质	70g 书纸	时间码	2025111201
工艺	骑马订，双面单黑印刷	专色	
尺寸	75 × 75mm		
公差	± 1 mm		



Scan the QR code to
view the product model.



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !




1008 MC 69267535

CPR-DoP-XS-T03

EN 14604:2005/AC:2008

X-SENSE® Pro |  Link+ Pro

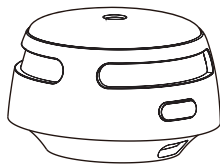

XS01-M

Brukermanual
Link+ Pro Røykvarsler

X-Sense Electronics, Ltd.
Email: support@x-sense.com

F800004000261 V1.0

Contents

English	01-33
Norsk Bokmål	34-64

English

This user manual contains important information regarding the operation of your X-Sense smoke alarms. Ensure you read this user manual fully before installing and operating the smoke alarms and base station. If you are installing these smoke alarms and base station for use by others, you must leave this manual (or a copy of it) with the end user.

1 Introduction

Thank you for your purchase. These smoke alarms comply with the European standard EN 14604:2005+ AC:2008 and are designed to detect smoke.

These smoke alarms can be connected to the X-Sense SBS50 base station using the X-Sense Home Security app. After connecting to the base station, these alarms will be interconnected, so when one alarm is triggered, all will sound an alarm.

This alarm supports Link⁺ Pro. Please note the following:

- 1. Only devices that are advertised as supporting Link⁺ Pro can be connected to the app via the base station.*
- 2. Link⁺ Pro supports both base station connection and a customizable wireless network as separate networks. You can only connect a device to one of them at a time. If you connect them to the base station, you'll*

receive app notifications but lose the customizable wireless network. Choosing the customizable wireless network means disconnecting from the base station and losing app notifications. Wireless interconnection is supported regardless of your choice.

- 3. This device can be interconnected with other Link+ series devices to create a customizable wireless network.*
- 4. Switching between the base station and customizable wireless network is simple and can be done at any time by following the corresponding adding method.*
- 5. Please note that the interlinked test function is not supported by the base station.*

Safety Information

DANGERS, WARNINGS, AND CAUTIONS ALERT YOU TO IMPORTANT INSTALLATION AND OPERATING INSTRUCTIONS, OR POTENTIAL HAZARDS. PLEASE PAY ATTENTION TO THE SITUATIONS.

IMPORTANT


1. THIS DEVICE IS NOT DESIGNED FOR HEARING-IMPAIRED PEOPLE. USE OF ALCOHOL OR DRUGS MAY IMPAIR ONE'S ABILITY TO HEAR THE SMOKE ALARM.
2. FIRES IN CHIMNEYS, WALLS, ROOFS, OR BEHIND CLOSED DOORS MAY NOT BE DETECTED.
3. THIS DEVICE IS NOT INTENDED FOR DETECTING FLAMES, HEAT,

CARBON MONOXIDE, OR OTHER HAZARDOUS GASES.

WARNING

1. NEVER IGNORE AN ALARM. FAILURE TO RESPOND CAN RESULT IN SERIOUS INJURY OR EVEN DEATH.
2. THE SILENCE FEATURE IS ONLY FOR YOUR CONVENIENCE AND WILL NOT CORRECT A PROBLEM. ALWAYS CHECK YOUR HOME FOR ANY POTENTIAL HAZARDS EVERY TIME AN ALARM SOUNDS.
3. TEST THIS SMOKE ALARM ONCE A WEEK. IF THE ALARM FAILS TO TEST CORRECTLY, REPLACE IT IMMEDIATELY! IF THE ALARM IS NOT WORKING PROPERLY, IT WILL NOT ALERT YOU TO A PROBLEM.
4. THIS ALARM SHOULD BE INSTALLED BY A COMPETENT PERSON.
5. ALARMS SHOULD NOT BE USED AS A SUBSTITUTE FOR PROPER INSTALLATION, USE AND MAINTENANCE OF FUEL BURNING APPLIANCES INCLUDING APPROPRIATE VENTILATION AND EXHAUST SYSTEMS.
6. TO PREVENT INJURY, THIS DEVICE SHOULD BE SECURELY ATTACHED TO THE CEILING OR WALL IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.
7. BATTERIES SHOULD NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS DIRECT SUNLIGHT, FIRE, ETC.

1.1 Product Overview

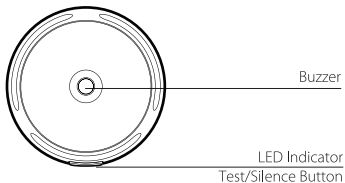

1.2 Technical Specifications

Product Name	Smoke Alarm
Model	XS01-M
Power Supply	3 V (≡) CR123A lithium battery × 1 (replaceable)
Battery Life	5 years (test once a week) (wireless interconnected network) 3-5 years (when connected to base station)
Maximum Service Life	10 years
Sensor Type	Smoke: Photoelectric

Safety Standard	EN 14604
Operating Temperature	40–100°F (4.4–37.8°C)
Operating Relative Humidity	10%–85% RH (non-condensing)
Alarm Noise Level	≥ 85 dB at 10 ft (3 m) @ 3.2 ± 0.3 kHz pulsing alarm
Silence Duration	≤ 9 minutes
Band	869.25–869.3 MHz
Max. RF Power	10 mW
Maximum Number of Allowed Units	one base station can add up to 50 smoke alarms.
Maximum Number of Interconnected Units	24 wireless units (only compatible with X-Sense Link+ Pro and Link+ wireless alarms)
Transmission Range	Over 1,640 ft (500 m) in open air

NOTES:

- Battery life is calculated on the current ratings in the standby mode with weekly testings. If its operation mode changes to an alarming condition, the battery life will be decreased accordingly.***
- The smoke alarm functions between 40 and 100°F (4.4 and 37.8°C). Prolonged exposure to temperatures outside of this range can reduce battery life and affect accuracy. We do not recommend operating the device outside of this range.***

1.3 Package Contents



Alarm Unit



Mounting Bracket



Screws



Anchor Plugs



User Manual



CR123A Battery
(Pre-installed)

2 Adding the Alarms to the Base Station

2.1 Device Setup

Download the X-Sense Home Security App



Download on the
App Store



GET IT ON
Google Play

NOTE: Make sure your smartphone supports iOS 11 and higher, or Android 8.0 and higher.

To download the app, search for “**X-Sense Home Security**” in the Apple App Store or Google Play, or simply scan the QR code. Create an account using a valid email address. If you already have an account, make sure it is updated to the latest version.

Before connecting devices, make sure that:

1. You know your Wi-Fi network name and password.
2. You are connecting your device using a 2.4 GHz Wi-Fi network (incompatible with 5 GHz Wi-Fi network).
3. Make sure the Bluetooth on your phone is turned on.

NOTE: When the device is configured via Wi-Fi, make sure your mobile phone and devices are as close to the router as possible, which can speed up device configuration.

Connect the Link+ Pro Smoke Alarm to the Base Station

The alarms added to the same base station will be interconnected. When one of the alarms triggers, all alarms and the base station will sound the alarm together. You can receive push notifications wherever you are to stay informed of the device status, and to silence an alarm from your smartphone.

NOTE: Before adding devices to the system, make sure the base station has been successfully added to the app.

1. Tap "⊕", select "Smoke Alarms", and then select "Link+ Pro Smoke Alarms (Working with SBS50 Base Station)". Then select "XS01-M" in the product list. Enter a name for the alarm and select the room in which it is installed. Tap "Next" to add.
2. Remove the insulating film to power up the alarm.
3. Follow the prompts on the page by pressing the test/silence button twice on the side of the smoke alarm until the red LED flashes rapidly, indicating that the device is waiting to connect to the Wi-Fi.
4. Tap "Next" to add the device. You will hear "Ready to add the device."
5. After successfully connected, you will hear "Device added" and the "Device added" page will appear. Then you can find the smoke alarm in the device list.
6. If you want to add multiple devices into the system, please repeat the above steps.

NOTE: If you fail to add the smoke alarm to the network within 60

seconds, the device will automatically exit the network configuration. To re-enter the network configuration, you need to repeat the above steps.

2.2 App Features

Notifications: You will receive push notifications on the app for smoke alarms, danger cleared, low battery, device malfunction, end of life, etc.

Device Test: Simply tap the "Device Test" button in the app to test whether the device is functioning properly.

Device Sharing: You can share the device with your family members and friends. They will receive app push notifications for alarms and have the ability to silence the device, view historical events, etc.

3 Interconnect the Alarms Without Adding to the Base Station

If you don't want to add the smoke alarms to the base station, you can connect the smoke alarms using RF technology to create an interconnected alarm system. However, you will no longer be able to receive push notifications on your phone from the X-Sense Home Security app.

NOTE: The XS01-M smoke alarms can be connected to the X-Sense Link+ Pro and Link+ alarms using wireless interconnection without being connected to the base station.

3.1 How to Set Up and Interconnect Wireless Alarms

The wireless interlinked alarms contain a built-in RF module that enables you to wirelessly connect 2 or more interlinked alarms and create an interlinked network. When one unit is triggered, all interconnected alarms will sound. The X-Sense wireless interconnected alarms contain wireless interlinked smoke alarms, wireless interlinked carbon monoxide alarms, and wireless interlinked combination smoke and carbon monoxide alarms. This model is designed to be wirelessly interlinked with other X-Sense alarms, but is not designed to communicate with wireless interlinked alarms from other manufacturers.

The X-Sense wireless interlinked alarms in one multi-pack have already been interconnected, and the alarms in each multi-pack have their own independent interlinked network. If you have more than one multi-pack, you will need to connect them all to the same network. Choose one multi-pack as your base network and connect the other multi-packs to it.

NOTE: The following instructions regarding wireless interconnection are applicable to the X-Sense Link⁺ Pro and Link⁺ wireless interlinked alarms only.

How to Interconnect


1. Make sure you only work with 2 units at a time, and make sure that they are both turned on to ensure successful connection.

NOTE: To turn on XS01-M, pull out the battery insulating film from the battery compartment. To learn how to turn on different models

of wireless interlinked alarms, please refer to their specific user manuals for more details.

2. Quickly press the test/silence button on one of the 2 units 4 times; it will beep once and the red LED will flash slowly, indicating it has entered pairing mode and is waiting for a new unit to be added. Quickly press the test/silence button on the other unit twice; it will beep once and the red LED will flash rapidly, indicating it is searching for a device to connect to.
3. After the search is successful and an interconnected group is created, both units will beep once and automatically exit the interconnection mode. At this point, both units will only flash once every 60 seconds, indicating they are in normal standby mode.
4. If you want to connect a third alarm to this group, first activate a new device by pulling out the battery insulating film, then quickly press the test/silence button on either of the 2 previously interconnected units 4 times. This unit will beep once, and the red LED will flash slowly, indicating it is ready to add a new device to the network. Next, quickly press the test/silence button on the new unit twice, and the red LED will flash rapidly, as it searches for a network to connect to. After the third unit successfully joins the interconnected network, both units will beep once and automatically exit the interconnection mode.
5. If you want to connect more units, simply repeat step 4. Up to 24 alarms can be interconnected this way. **To ensure that all alarms enter the same interlinked network, make sure you only work with 2**

6. Test the alarms according to the steps in the section "Alarm Test."

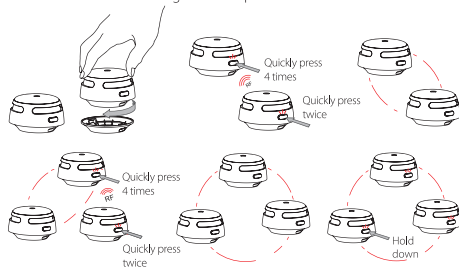

1. The alarm will enter the searching mode or the pairing mode for 60 seconds with the red LED flashing. After 60 seconds, repeat step 2 to connect the alarms. If needed, press the test/silence button once while the alarm is in the searching mode or the pairing mode, and the red LED will stop flashing and the alarm will quit the pairing mode to enter normal status.


2. *Test all wireless alarms to ensure they are interconnected before installation.*
3. *A maximum of 24 wireless alarms can be interconnected on the same network.*
4. *The model can only be interconnected with other X-Sense Link+ Pro and Link+ wireless interlinked alarms.*

Quickly press the test/silence button 4 times; the smoke alarm will beep once. Then, hold down the button until it beeps once more to disconnect. After disconnecting, it can be reconnected to the same network, or added to a new network.

NOTE: The X-Sense Link⁺ Pro wireless interlinked alarms in one multi-pack have already been interconnected. To create a new network, you will first need to disconnect each alarm individually in this multi-pack to avoid having them all join the same network.

4.1 Where to Install

NOTE: Before installation, it is recommended to test the interconnected alarms in the rooms where you intend to install them to ensure that they are within transmission range and that nothing will interfere with their communication.

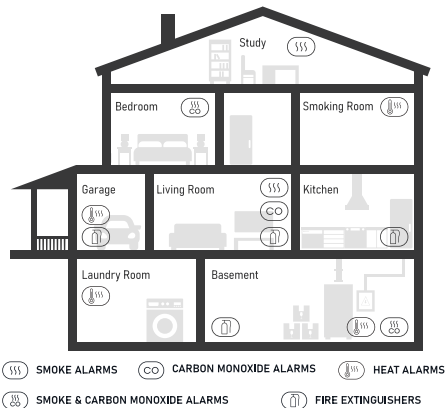

NOTE: If a smoke alarm is installed in a kitchen, ensure it has an accessible silence button, and install it as far away from the stove and sink as possible to avoid false alarms.


4.2 Locations to Avoid

1. Near large metal surfaces and/or bundles of wire.
2. Near fluorescent lights, amateur radios, electrical equipment, or other devices that may transmit an RF signal, as electronic “noise” may cause nuisance alarms.

4.3 Specific Location of Installation

1. Prioritize the installation of an alarm in the bedroom and hallways, and make sure you can hear the alarm from all sleeping areas. In a home with several bedrooms, install an alarm in every bedroom. If you install only one smoke alarm in your home, install the alarm near to all bedrooms where possible, and not in a basement or furnace room.
2. Install an alarm above the stairway and on every floor of the house.
3. Smoke, heat and anything burning will spread horizontally after rising to the ceiling, so install the alarm in the middle of the ceiling where possible. Ensure that the alarm is installed at the minimum distance away from corner.
4. If an alarm cannot be installed in the middle of a ceiling, install it at a distance of 20 inches (50 cm) away from the corners of the room.
5. If an alarm is installed onto a wall, a distance of 4-12 inches (10-30 cm) should be kept below the ceiling.

- If the length of a room or hall is beyond 30 feet (900 cm), several alarms should be installed in the same room.
- When the wall or ceiling is angled, the alarm needs to be installed within 3 feet (90 cm) of the highest wall or ceiling point (measured horizontally) in the room.
- In multi-level houses or apartments, install at least one wireless smoke alarm on each level and keep them installed in a straight vertical line (see diagram) with as few obstacles between each of the interconnected alarms as possible to ensure optimal signal transmission.

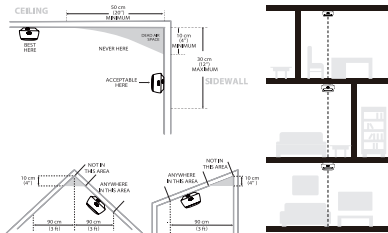


⚠ WARNING

TO PREVENT INJURY, THIS DEVICE SHOULD BE SECURELY ATTACHED TO THE CEILING OR WALL IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.

4.4 Installation Method

- Use the mounting bracket to mark the screw holes on the ceiling or the wall.
- Drill holes at the 2 marks using an appropriately-sized drill bit. Insert the anchor plugs and screw the mounting bracket using the screws provided.
- Attach the alarm to the mounting bracket and turn clockwise to lock the alarm.
- Test the alarm according to the steps in the section "Alarm Test."

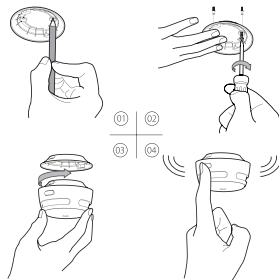

4.5 Test After Installation

Alarm Test

Be sure to test your alarms when you turn them on for the first time, when the installation is finished or when the group configuration has changed. In addition to the weekly tests you should perform, it is recommended to test the alarm after returning from a long trip or vacation.

If your X-Sense XS01-M smoke alarm is interconnected to other X-Sense wireless alarms, we recommend that every individual alarm is tested during the weekly test.

	Test a Single Alarm	Test All Interconnected Alarms
Action	Press the test/silence button. Or tap the Device Test button in its Device Settings page in the app.	Hold down the test/silence button.
Indication	• The alarm will beep 3 times every 4 seconds. • The red LED will flash during the audible signal. • For devices connected to the base station, a push notification will be sent to your smartphone.	• The initiating unit will beep continuously with the red LED flashing. • Other interconnected alarms in the network will receive the test signal after 5 seconds, then they will beep continuously with the LED flashing red and green successively (red only for XS01-M). Release the

	• Then the alarm will automatically enter standby mode.	- test/silence button and all the units will stop testing. • The testing of the units should be completed within 3 minutes. • After testing, the units will automatically enter standby mode.
--	---	---


NOTES:

- 1. The devices connected to the base station can only be tested individually. The interconnected devices that are not connected to the base station can be tested by holding down the test/silence button on one of the devices.***
- 2. The test function accurately tests the alarm's smoke sensing circuit without the need to test with smoke. If your smoke alarm fails to give an audible test signal, please refer immediately to the troubleshooting guide at the end of this manual. Never use an open flame to test this device.***

4.6 Battery Replacement

- To replace the battery, detach the smoke alarm from the mounting bracket by twisting counterclockwise.
- Pull the battery removal tab to remove the battery, and then install a new battery, matching the correct polarity markings.

3. Test the alarm, and then mount the alarm onto the mounting bracket by twisting clockwise to lock the alarm.

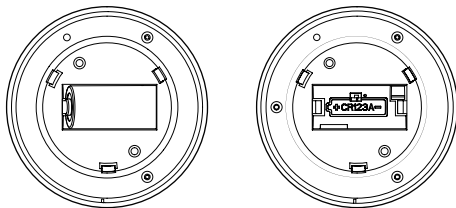

⚠ WARNING

- KEEP NEW OR OLD USED BATTERIES OUT OF REACH OF CHILDREN.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice immediately.
- NEVER charge a battery unless it is a rechargeable battery.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd; Ni-MH) batteries.

- Different types of batteries or new and used old batteries are not to be mixed. Do not mix batteries of different manufacturers, capacities, or sizes.
- Batteries must be inserted with the correct polarity. Replacement of a battery with an incorrect type can defeat the safeguard. There will be a risk of fire or explosion if a battery is replaced by an incorrect type.

WARNING: Test the alarm for correct operation using the test facility, whenever the battery is replaced.

5 Introduction of Functions

5.1 Alarm Mode

For devices connected to the base station:

- When an alarm is triggered, an in-app message will appear and an alarm push notification will be sent to your smartphone.
- When one alarm is triggered, all devices connected to the system and the base station will sound an alarm simultaneously.
- The base station will automatically mute after 10 minutes of continuous alarm. After the base station stops the alarm, all devices in the interconnected system will still alarm.
- In the case that the base station powers off and is disconnected from the network, all devices are still interconnected, so when one alarm is triggered, all will go off.

- The volume level of the base station is adjustable. The alarms and base station can be remotely muted through the app. An app push notification will be sent to your phone when the smoke drops below the alarm threshold.

1. If the Initiating Unit Is Triggered by Smoke:

When one XS01-M smoke alarm is triggered in the interconnected network, the unit will beep 3 times every 4 seconds, paired with red LED flashing. Any other units will follow suit—they will beep 3 times every 4 seconds, paired with the LED flashing red and green in succession (or only red LED flashing for XS01-M). When the smoke concentration level drops below the alarm threshold, the alarm will cease.

2. If the Initiating Unit Is Triggered by CO:

When one CO alarm is triggered in the interconnected network, the unit will beep 4 times every 5.8 seconds, paired with the LED flashing red. Any other units will follow suit—they will beep 4 times every 5.8 seconds, paired with the LED that flashes red 4 times first, followed by the LED that flashes green once with every beep (or only red LED flashing for XS01-M). When the CO concentration level drops below the alarm threshold, the alarm will cease.

For more details, please see “LED Indicator and Audible Alarm”.

NOTES:

- 1. When one unit is triggered, other interconnected units will sound. If the smoke alarm and CO alarm are triggered in the network at the**

same time, the alarm signal of the smoke alarm will take priority over that of the CO alarm.

- 2. This alarm has a relay function that extends the wireless interconnected network for wide detection coverage.**

5.2 Silence Mode

You can silence the device by pressing the test/silence button on the device or tapping the silence button in the app.

If you press the silence button during an alarm state, the unit will be in the silence mode for 9 minutes. During the silence mode, the red LED will flash once every 5 seconds. The alarm will enter the normal mode after 9 minutes.

When Connected to the Base Station

When an alarm is triggered, you can press the Silence button on the base station to silence all interlinked alarms except the initiating alarm. To silence the initiating alarm, simply press the test/silence button on the device. Additionally, you can tap the "Silence All" button in the app to silence the base station and all alarms, including the initiating one. You can tap the "Locate" button in the app to find the initiating alarm; all devices will stop alarming except the initiating alarm. Simply silence the initiating alarm by tapping the silence icon in the app or by pressing the test/silence button on the device.

When Not Connected to the Base Station

Simply press the test/silence button on one of the devices to silence the interconnected system, however only silencing the initiating alarm will

silence all other interconnected alarms.

NOTES:

- 1. You can silence all interconnected units by pressing the test/silence button on one of the units. If one unit is still alarming, it is the initiating unit (the unit that detected danger); to silence all interlinked units, you must also press the test/silence button on the initiating unit.***
- 2. While interconnected, the initiating unit cannot be triggered again during the 9-minute silence duration. However, all other interconnected units can be triggered again if they detect danger during the silence mode.***

5.3 Low Battery Mode

The red LED flashes once every 60 seconds, accompanied by a single beep.

5.4 Fault Mode

The red LED flashes twice every 60 seconds, accompanied by two beeps.

6 Daily Maintenance

To keep your smoke alarm in good working order, follow these simple steps:

1. Verify the unit's alarm sound and indicator are working properly by testing the unit once a week.
2. As a minimum your smoke alarm should be cleaned once every 3 months: Remove the unit from the ceiling and clean the alarm cover and vents with your vacuum cleaner fitted with the soft brush attachment to remove dust and dirt.
3. Never use detergents or other solvents to clean the unit.
4. Avoid spraying air fresheners, hair spray or other aerosols near the alarm.
5. Do not paint the unit. Paint will seal the vents and interfere with the sensor's ability to detect fire.
6. Never attempt to disassemble the unit or clean inside. Doing so will void your warranty.
7. When removed, place the smoke alarm back in its proper location as soon as possible, to assure continuous protection from fire.
8. When household cleaning supplies or similar contaminants are used, the area should be ventilated.

7 Audio-Visual Display

LED Indicator and Audible Alarm

Status	LED Indicator	Audible Alarm	Action
Standby Mode	Red LED flashes once every 60 seconds.	None.	

Alarm Mode	Unit detects smoke and initiates an alarm.	Red LED flashes 3 times every 4 seconds.	3 beeps every 4 seconds.	Dangerous smoke concentration is detected. Open nearby windows and doors, and immediately move to fresh air.
	All other interconnected units in the network.	• XS01-M: Red LED flashes 3 times every 4 seconds.	3 beeps every 4 seconds.	Dangerous smoke concentration is detected by the
		• Devices with a 2-color/3-color LED indicator: The LED flashes red and green 3 times sequentially every 4 seconds.		initiating unit in the network. Please find the initiating unit and take action.

		• XS01-M: Red LED flashes 4 times every 5.8 seconds. • Devices with a 2-color/3-color LED indicator: The LED flashes red 4 times, then the LED flashes green once every 5.8 seconds.	4 beeps repeating every 5.8 seconds.	Dangerous CO concentration is detected by the initiating unit, and has reached the alarm status. Please find the initiating unit and take action.
	Unit detected smoke and initiated an alarm.	Red LED flashes once every second for 5 seconds.	None.	Alarm cancellation: When the smoke concentration level drops below the alarm threshold, the alarm signal will stop. Then, the alarm goes back to the standby mode.

Test Mode	Test a single unit.	Red LED flashes 3 times every 4 seconds.	3 beeps every 4 seconds.	- Press the test/silence button on the device. - Tap the Device Test button in the app (for devices connected to the base station).
	Test all interconnected units.	Red LED flashes 3 times every 4 seconds.	Continuous beeping until you release the test/silence button.	Initiating unit. Hold down the test/silence button on one unit in the network.
		- XS01-M: Red LED flashes 3 times every 4 seconds. - Devices with a 2-color/3-color LED indicator: The LED flashes red and green sequentially.		Other interconnected alarms in the network.

Silence Mode	Red LED flashes once every 5 seconds.	None	After 9 minutes, the unit will exit silence mode.
Low Battery	Red LED flashes once every 60 seconds.	1 beep every 60 seconds.	Replace the battery immediately.
Malfunction	Red LED flashes twice every 60 seconds.	2 beeps every 60 seconds.	Replace the device immediately.

8 Troubleshooting

PROBLEM	CAUSE	SOLUTION
The device is not triggered when it is tested with smoke.	The smoke is not reaching the sensor properly.	The smoke needs to enter the smoke sensor from the metal mesh on the side to trigger the device.
	The time duration is insufficient for the device to detect smoke.	Continuous smoke is necessary for the device to be triggered. When smoke reaches the smoke sensor, the device will be triggered in about 20 seconds.

	The smoke concentration is low.	This product utilizes a photoelectric sensor, requiring sufficient smoke concentration for detection. Higher smoke levels lead to faster alarm response. Avoid using an open flame for testing.
The device does not sound during testing.	The device does not turn on.	Please ensure the battery insulating film is removed and the device is turned on. If the battery runs out, replace the battery immediately.
	You don't push the test/silence button firmly.	Make sure you push the test/silence button firmly.
	The device is improperly installed.	Check the installation positioning. The wireless signal might be blocked or out of range.
The app push notification is delayed or there are no push alerts.	The app push notification permission is disabled.	Turn on the push notification permission on the phone.

	The base station is not within the network coverage of the router.	The distance between the base station and the router should be within 164 ft (50 m). Please ensure that the base station is always within the network coverage of the router.
	The communication between the smoke alarm and base station is not stable or they are too far apart.	Reduce the obstacles between the smoke alarm and base station. The maximum distance between the device and the base station in an open environment is 1,640 ft (500 m).
False alarms are triggered intermittently or when residents are cooking, taking showers, etc.	The device is improperly installed.	Install the device far away from kitchen appliances, dusty places, shower areas, and locations where the temperature is over 100°F (37.8°C) or below 40°F (4.4°C). Check the location of your alarm (see "Where to Install").
	The device is clogged by dirt and dust.	Clean the device periodically (see "Daily Maintenance").

Red LED flashes and the alarm sounds 1 beep every 60 seconds.	Low battery.	The battery is low. Replace the battery immediately.
Red LED flashes and the alarm sounds 2 beeps every 60 seconds.	Malfunction.	The alarm is malfunctioning. Replace the device immediately.

9 Statement

CAUTION-RF ENERGY EXPOSURE AND PRODUCT SAFETY GUIDE

- Before using this device, please read this guide which contains important operating instructions for safe usage, control information and operational instructions for compliance with RF Energy Exposure limits in applicable national and international standards.
- User instructions should accompany the device when transferred to other users.

Simple EU declaration of conformity

X-Sense Electronics Co., Ltd. declares that the radio equipment type is in compliance with the essential requirements and other relevant provisions of CPR Regulation (EU) 2024/3110 and RED Directive 2014/53/EU and the RoHS Directive 2011/65/EU and the WEEE Directive 2012/19/EU; the full text of the EU declaration of conformity is available at the following internet address: www.x-sense.com.

Environmental Protection

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that all electrical and electronic products, batteries, or accumulators must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws and rules in your area.



10 Manufacturer and Service Information

10.1 Manufacture

X-Sense Electronics Co., Ltd.
Address: B4-503, Kexing Science Park, 15 Keyuan Road, Shenzhen, 518057, CHINA
support@x-sense.com

10.2 Importer

X-Sense Europe B.V.
Parellaan 2H
2132WS Hoofddorp
Netherlands

Norsk Bokmål

Denne brukerhåndboken inneholder viktig informasjon om bruken av X-Sense røykvarslere og basestasjon. Les hele brukerhåndboken før du installerer og tar i bruk røykvarslere og basestasjon. Hvis du installerer disse røykvarslerne og basestasjonen for bruk av andre, må du legge igjen denne håndboken (eller en kopi av den) hos sluttbrukeren.

1 Innledning

Takk for kjøpet. Disse røykvarslerne er i samsvar med europeisk standard EN 14604:2005+AC:2008 og er designet for å oppdage røyk.

Disse røykvarslerne kan kobles til X-Sense SBS50-basestasjonen ved hjelp av X-Sense Home Security-appen. Etter at de er koblet til basestasjonen, vil disse varslerne være sammenkoblet, slik at når ett varsel utløses, vil alle varsle.

Denne alarmen støtter Link⁺ Pro. Vær oppmerksom på følgende:

- 1. Bare enheter som er annonsert som compatible med Link⁺ Pro, kan kobles til appen via basestasjonen.*
- 2. Link⁺ Pro støtter både basestasjonsforbindelse og et tilpassbart trådløst nettverk som separate nettverk. Du kan bare koble en enhet til ett av dem om gangen. Hvis du kobler dem til basestasjonen, vil du motta appvarsler, men miste det tilpassbare trådløse nettverket. Hvis du velger det tilpassbare trådløse nettverket, kobles du fra basestasjonen og mister appvarsler. Trådløs sammenkobling støttes uavhengig av hvilket*

alternativ du velger.

- 3. Denne enheten kan kobles sammen med andre enheter i Link⁺ -serien for å opprette et tilpassbart trådløst nettverk.*
- 4. Det er enkelt å bytte mellom basestasjonen og det tilpassbare trådløse nettverket, og det kan gjøres når som helst ved å følge den tilsvarende tilføyingsmetoden.*
- 5. Vær oppmerksom på at den sammenkoblede testfunksjonen ikke støttes av basestasjonen.*

Sikkerhetsinformasjon

FARE, ADVARSELER OG FORSIKTIGHETSREGLER VARSLE DEG OM VIKTIGE INSTALLASJONS- OG BRUKSANVISNINGER ELLER POTENSIELLE FARER. VÆR OPPMERKSOM PÅ SITUASJONENE.


VIKTIG

- DENNE ENHETEN ER IKKE UTFORMET FOR HØRSELHEMMEDE PERSONER. BRUK AV ALKOHOL ELLER NARKOTIKA KAN SVEKKE EVNEN TIL Å HØRE RØYKALARMEN.
- BRANN I SKORSTEINER, VEGGER, TAK ELLER BAK LUKKEDE DØRER KAN VÆRE UMULIG Å OPPDAGE.
- DENNE ENHETEN ER IKKE MENT FOR Å DETEKTERE FLAMMER, VARME, KARBONMONOKSID ELLER ANDRE FARLIGE GASSER.

⚠ ADVARSEL

1. IGNORER ALDRI EN ALARM. MANGLENDE REAKSJON KAN FØRE TIL ALVORLIGE SKADER ELLER DØDSFALL.
2. STILLE-FUNKSJONEN ER KUN FOR DIN BEKVEMMELIGHET OG VIL IKKE LØSE ET PROBLEM. KONTROLLER ALLTID HJEMMET FOR POTENSIELLE FARER HVER GANG ALARMEN GÅR.
3. TEST DENNE RØYKALARMEN EN GANG I UKEN. HVIS ALARMEN IKKE FUNKERER SOM DEN SKAL, SKAL DEN SKIFTES UT UMIDDELBART! HVIS ALARMEN IKKE FUNGERER SOM DEN SKAL, VIL DEN IKKE VARSLE DEG OM ET PROBLEM.
4. DENNE ALARMEN SKAL INSTALLERES AV EN KOMPETENT PERSON.
5. ALARMER SKAL IKKE BRUKES SOM ERSTATNING FOR KORREKT INSTALLASJON, BRUK OG VEDLIKEHOLD AV BRENSSELFØRBRUKENDE APPARATER, INKLUDERT TILSTREKKELIG VENTILASJON OG AVGASSYSTEMER.
6. FOR Å UNNGÅ SKADE, MÅ DENNE ENHETEN FESTES SIKKERT TIL TAKET ELLER VEGGEN I HENHOLD TIL INSTALLASJONSVEILEDNINGEN.
7. BATTERIER SKAL IKKE UTSETTES FOR OVERDREVET VARME, SOM DIREKTE SOLLYS, ILD, ETC.

1.1 Produktoversikt

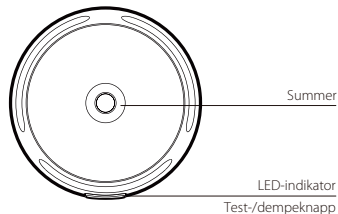

1.2 Tekniske spesifikasjoner

Strøm	3 V (≡) CR123A litiumbatteri × 1 (utskiftbart)
Batterilevetid	5 år (test én gang i uken) (trådløst sammenkoblet nettverk) 3–5 år (når tilkoblet basestasjon)
Maksimal levetid	10 år
Sensortype	Røyk: Fotoelektrisk
Sikkerhetsstandard	EN 14604
Driftstemperatur	4,4–37,8 °C
Relativ luftfuktighet ved drift	10–85 % RH (ikke kondenserende)
Alarmlydnivå	≥ 85 dB ved 3 m @ 3,2 ± 0,3 kHz pulserende alarm
Stille varighet	≤ 9 minutter
Bånd	869,25–869,3 MHz
Maks. RF-effekt	10 mW
Maksimalt antall tillatte enheter	Én basestasjon kan koble til opptil 50 røykvarslere.
Maksimalt antall sammenkoblede enheter	24 trådløse enheter (kun kompatibel med X-Sense Link ⁺ Pro og Link ⁺ trådløse alarmer)
Overføringsrekkevidde	Over 500 m i åpen luft

MERKNADER:

1. Batterilevetiden er beregnet ut fra gjeldende spesifikasjoner i standby-modus med ukentlige tester. Hvis driftsmodusen endres til en alarmtilstand, vil batterilevetiden reduseres tilsvarende.
2. Røykvarsleren fungerer mellom 4,4 og 37,8 °C. Langvarig eksponering for temperaturer utenfor dette området kan redusere batterilevetiden og påvirke nøyaktigheten. Vi anbefaler ikke å bruke enheten utenfor dette området.

1.3 Pakkens innhold



Alarmenhet



Monteringsbrakett



Skruer



Ankerplugger



Brukerhåndbok



CR123A-batteri
(forhåndsinstallert)

2 Legge til alarmer til basestasjonen

2.1 Enhetsoppsett

Last ned X-Sense Home Security-appen



For å laste ned appen, søk etter «X-Sense Home Security» i Apple App Store eller Google Play, eller bare skann QR-koden. Opprett en konto med en gyldig e-postadresse. Hvis du allerede har en konto, må du sørge for at den er oppdatert til den nyeste versjonen.

MERK: Sørg for at smarttelefonen din støtter iOS 11 og nyere, eller Android 8.0 og nyere.

Før du kobler til enheter, må du kontrollere at:

1. Du kjenner navnet på Wi-Fi-nettverket ditt og passordet.
2. Du kobler enheten til et 2,4 GHz Wi-Fi-nettverk (inkompatibelt med 5 GHz Wi-Fi-nettverk).
3. Sørg for at Bluetooth er slått på på telefonen.

MERK: Når enheten konfigureres via Wi-Fi, må du sørge for at mobiltelefonen og enhetene er så nær ruterer som mulig, da dette kan gjøre enhetskonfigurasjonen raskere.

Koble Link⁺-røykvarsleren til basestasjonen

Alarmene som er lagt til samme basestasjon, vil være sammenkoblet. Når en av alarmene utløses, vil alle alarmer og basestasjonen utløse alarmen samtidig. Du kan motta push-varsler uansett hvor du er for å holde deg informert om enhetens status og for å dempe en alarm fra smarttelefonen din.

MERK: Før du legger til enheter i systemet, må du kontrollere at basestasjonen er lagt til i appen.

1. Trykk på « $\oplus$ », velg «Smoke Alarms» og velg deretter «Link⁺ Pro Smoke Alarms (Working with SBS50 Base Station)». Velg deretter «XS01-M» i produktlisten. Angi et navn for alarmen og velg rommet den er installert i. Trykk på «Next» for å legge til.
2. Fjern isolasjonsfilmen for å slå på alarmen.
3. Følg instruksjonene på siden ved å trykke to ganger på test-/lydknappen på siden av røykvarsleren til den røde LED-lampen blinker raskt, noe som indikerer at enheten venter på å koble seg til Wi-Fi.
4. Trykk på «Next» for å legge til enheten. Du vil høre «Ready to add the device».
5. Når tilkoblingen er fullført, hører du «Device added», og siden «Device added» vises. Deretter finner du røykvarsleren i enhetslisten.
6. Hvis du vil legge til flere enheter i systemet, gjentar du trinnene ovenfor.

MERK: Hvis du ikke klarer å legge til røykvarsleren i nettverket innen 60 sekunder, vil enheten automatisk avslutte nettverkskonfigurasjonen. For å gå tilbake til nettverkskonfigurasjonen må du gjenta trinnene ovenfor.

2.2 Appfunksjoner

Varsler: Du vil motta push-varsler i appen for røykvarslere, fare avverget, lavt batterinivå, enhetsfeil, slutten av levetiden osv.

Enhets-test: Trykk på «Device Test»-knappen i appen for å teste om enheten fungerer som den skal.

Deling av enheter: Du kan dele enheten med familie og venner. De vil motta push-varsler i appen for alarmer og har muligheten til å dempe enheten, se historiske hendelser osv.

3 Koble sammen alarmene uten å legge dem til basestasjonen

Hvis du ikke vil legge til røykvarslerne til basestasjonen, kan du koble røykvarslerne ved hjelp av RF-teknologi for å opprette et sammenkoblet alarmsystem. Du vil imidlertid ikke lenger kunne motta push-varsler på telefonen din fra X-Sense Home Security-appen.

MERK: XS01-M røykvarslere kan kobles til X-Sense Link⁺ Pro og Link⁺ alarmer ved hjelp av trådløs sammenkobling uten å være koblet til basestasjonen.

3.1 Slik konfigurerer og kobler du sammen trådløse alarmer

De trådløse sammenkoblede alarmene har en innebygd RF-modul som gjør at du kan koble sammen to eller flere sammenkoblede alarmer trådløst og opprette et sammenkoblet nettverk. Når en enhet utløses, vil alle sammenkoblede alarmer gå. De trådløse, sammenkoblede alarmene

fra X-Sense inneholder trådløse, sammenkoblede røykalarmer, trådløse, sammenkoblede karbonmonoksidalarmer og trådløse, sammenkoblede kombinasjonsalarmer for røyk og karbonmonoksid. Denne modellen er designet for å være trådløst sammenkoblet med andre alarmer fra X-Sense, men er ikke designet for å kommunisere med trådløse, sammenkoblede alarmer fra andre produsenter.

De trådløse, sammenkoblede alarmene fra X-Sense i en multipakke er allerede sammenkoblet, og alarmene i hver multipakke har sitt eget uavhengige sammenkoblede nettverk. Hvis du har mer enn én multipakke, må du koble dem alle til samme nettverk. Velg én multipakke som basenettverk og koble de andre multipakkene til denne.

MERK: Følgende instruksjoner om trådløs sammenkobling gjelder kun for de trådløse, sammenkoblede alarmene X-Sense Link⁺ Pro og Link⁺.


Slik kobler du sammen

1. Sørg for at du bare arbeider med to enheter om gangen, og at begge er slått på for å sikre en vellykket tilkobling.

MERK: For å slå på XS01-M, trekk ut batteriets isolasjonsfilm fra batterirommet. For å lære hvordan du slår på forskjellige modeller av trådløse sammenkoblede alarmer, se de spesifikke brukerhåndbøkene for mer informasjon.

2. Trykk raskt på test-/lydløs-knappen på en av de to enhetene fire ganger. Det høres et pip, og den røde LED-lampen blinker sakte, noe som indikerer at enheten er i paringsmodus og venter på at en ny enhet skal legges til. Trykk raskt på test-/lydløs-knappen på den andre enheten to ganger. Det høres et pip, og den røde LED-lampen blinker raskt, noe som indikerer at enheten søker etter en enhet å koble seg til.

3. Når søket er vellykket og en sammenkoblet gruppe er opprettet, vil begge enhetene pipe én gang og automatisk gå ut av sammenkoblingsmodus. På dette tidspunktet vil begge enhetene bare blinke én gang hvert 60. sekund, noe som indikerer at de er i normal standby-modus.
4. Hvis du vil koble en tredje alarm til denne gruppen, må du først aktivere en ny enhet ved å trekke ut batteriisolasjonsfilmen, og deretter trykke raskt på test-/lydløs-knappen på en av de to tidligere sammenkoblede enhetene fire ganger. Denne enheten vil pipe én gang, og den røde LED-lampen vil blinke sakte, noe som indikerer at den er klar til å legge til en ny enhet i nettverket. Trykk deretter raskt på test-/lydløs-knappen på den nye enheten to ganger, og den røde LED-lampen vil blinke raskt mens den søker etter et nettverk å koble seg til. Når den tredje enheten har koblet seg til det sammenkoblede nettverket, vil begge enhetene pipe én gang og automatisk gå ut av sammenkoblingsmodus.
5. Hvis du vil koble til flere enheter, gjentar du bare trinn 4. Opptil 24 alarmer kan kobles sammen på denne måten. **For å sikre at alle alarmer kommer inn i det samme sammenkoblede nettverket, må du sørge for at du bare arbeider med to enheter om gangen – én enhet går inn i paringsmodus og den andre enheten går inn i søkemodus.**
6. Test alarmene i henhold til trinnene i avsnittet «Alarmtest».



MERK:

1. Alarmen går inn i søkemodus eller paringsmodus i 60 sekunder, og den røde LED-lampen blinker. Etter 60 sekunder gjentar du trinn 2 for å koble til alarmene. Om nødvendig trykker du én gang på test-/lydløs-knappen mens alarmen er i søkemodus eller paringsmodus, og den røde LED-lampen slutter å blinke og alarmen avslutter paringsmodus og går tilbake til normal status.
2. Test alle trådløse alarmer for å sikre at de er koblet sammen før installasjon.
3. Maksimalt 24 trådløse alarmer kan kobles sammen på samme nettverk.
4. Modellen kan kun kobles sammen med andre X-Sense Link+ trådløse alarmer.

3.2 Hvordan koble fra

Trykk raskt på test-/lydløs-knappen 4 ganger; røykalarmen vil pipe én gang. Hold deretter knappen nede til den piper én gang til for å koble fra. Etter at den er koblet fra, kan den kobles til samme nettverk på nytt eller legges til et nytt nettverk.


MERK: De trådløse, sammenkoblede alarmene X-Sense Link+ Pro i en multipakke er allerede sammenkoblet. For å opprette et nytt nettverk må du

først koble fra hver alarm individuelt i denne multipakken for å unngå at alle blir koblet til samme nettverk.

4 Hvordan installere

4.1 Hvor skal du installere

MERK: Før installasjon anbefales det å teste de sammenkoblede alarmene i rommene der du har tenkt å installere dem, for å sikre at de er innenfor overføringsrekkevidden og at ingenting vil forstyrre kommunikasjonen mellom dem.

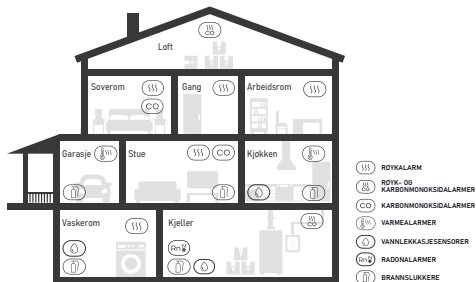

MERK: Hvis det er installert røykvarsler i kjøkkenet, må du sørge for at det har en lett tilgjengelig stoppknapp, og installere det så langt unna komfyr og vask som mulig for å unngå falske alarmer.


4.2 Steder som bør unngås

1. I nærheten av store metallflater og/eller kabelbunter.
2. I nærheten av lysrør, amatørradioer, elektrisk utstyr eller andre enheter som kan sende ut RF-signaler, da elektronisk «støy» kan forårsake falske alarmer.

4.3 Spesifikk installasjonsplassering

1. Prioriter installasjon av en alarm i soverom og ganger, og sørg for at alarmen kan høres fra alle soverom. I boliger med flere soverom bør det installeres en alarm i hvert soverom. Hvis du bare installerer én røykvarsler i boligen, bør den installeres i nærheten av alle soverom, og ikke i kjelleren eller fyrrommet.
2. Installer en alarm over trappen og på hver etasje i huset.
3. Røyk, varme og alt som brenner, sprer seg horisontalt etter å ha steget opp til taket, så installer alarmen midt på taket der det er mulig. Sørg for at alarmen er installert i minst mulig avstand fra hjørner.
4. Hvis det ikke er mulig å installere en alarm midt i taket, må den installeres i en avstand på 50 cm fra hjørnene i rommet.
5. Hvis en alarm installeres på en vegg, bør det være en avstand på 10–30 cm under taket.
6. Hvis lengden på et rom eller en hall er over 900 cm, bør det installeres flere alarmer i samme rom.

- Når veggen eller taket er skrått, må alarmen installeres innen 90 cm fra det høyeste punktet på veggen eller taket (målt horisontalt) i rommet.
- I hus eller leiligheter med flere etasjer må det installeres minst én trådløs røykvarsler på hver etasje, og de må installeres i en rett vertikal linje (se diagram) med så få hindringer som mulig mellom de sammenkoblede alarmene for å sikre optimal signaloverføring.

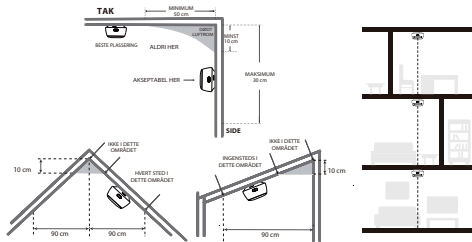


ADVARSEL

FOR Å UNNGÅ SKADE MÅ DENNE ENHETEN FESTES SIKKERT TIL TAKET ELLER VEGGEN I HENHOLD TIL INSTALLASJONSVEILEDNINGEN.

4.4 Installasjonsmetode

- Bruk monteringsbraketten til å merke av skru hullene på taket eller veggen.
- Bor hull på de to merkene med et bor av passende størrelse. Sett inn ankerpluggene og skru festebraketten fast med de medfølgende skruene.
- Fest alarmen til monteringsbraketten og vri den med klokken for å låse alarmen.
- Test alarmen i henhold til trinnene i avsnittet «Alarmtest».

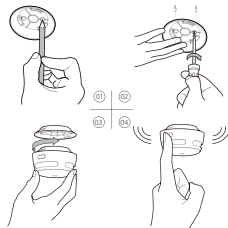

4.5 Test etter installasjon

Alarmtest

Sørg for å teste alarmene når du slår dem på for første gang, når installasjonen er ferdig eller når gruppekonfigurasjonen er endret. I tillegg til

de ukentlige testene du bør utføre, anbefales det å teste alarmen etter at du har kommet hjem fra en lang reise eller ferie.

Hvis X-Sense XS01-M røykalarmen er koblet sammen med andre trådløse X-Sense-alarmer, anbefaler vi at hver enkelt alarm testes under den ukentlige testen

	Test en enkelt alarm	Test alle sammenkoblede alarmer
Handling	Trykk på test-/lydløsknappen. Eller trykk på Enhetstest-knappen på siden Enhetsinnstillinger i appen.	Hold inne test-/lydløsknappen.
Indikasjon	1. Alarmen vil pipe 3 ganger hvert 4. sekund. 2. Den røde LED-lampen blinker mens det høres et lydsignal. 3. For enheter som er koblet til basestasjonen, vil det sendes en push-varsling til smarttelefonen din. 4. Deretter går alarmen automatisk i standby-modus.	1. Den utløsende enheten vil pipe kontinuerlig mens den røde LED-lampen blinker. 2. Andre sammenkoblede alarmer i nettverket vil motta testsignalet etter 5 sekunder, deretter vil de pipe kontinuerlig mens LED-lampen blinker rødt og grønt etter hverandre (kun rødt for XS01-M). Slipp test-/lydløsknappen, og alle enhetene vil stoppe testingen.


		3. Testingen av enhetene skal være fullført innen 3 minutter. 4. Etter testingen går enhetene automatisk i standby-modus.
--	--	---

MERKNADER:

1. *Enhetene som er koblet til basestasjonen kan bare testes individuelt. De sammenkoblede enhetene som ikke er koblet til basestasjonen kan testes ved å holde inne test-/lydknappen på en av enhetene.*
2. *Testfunksjonen tester nøyaktig alarmens røykdeteksjonskrets uten at det er nødvendig å teste med røyk. Hvis røykalarmen ikke avgir et hørbart testsignal, må du umiddelbart se feilsøkningsveiledningen på slutten av denne bruksanvisningen. Bruk aldri åpen ild til å teste denne enheten.*

4.6 Batteribytte

1. For å skifte batteri, løsne røykvarsleren fra monteringsbraketten ved å vri den mot klokken.
2. Trekk i batterifjerningsfliken for å fjerne batteriet, og sett deretter inn et nytt batteri med riktig polaritet.
3. Test alarmen, og monter deretter alarmen på monteringsbraketten ved å vri den med klokken for å låse alarmen.

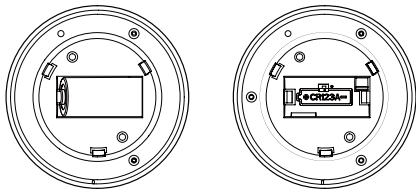

⚠ ADVARSEL

1. OPPBEVAR NYE ELLER BRUKTE BATTERIER UTENFOR BARNES REKKEVIDDE.
2. Hvis batteriet lekker, må du ikke la væsken komme i kontakt med huden eller øynene. Ved kontakt må det berørte området skylles med rikelig med vann, og lege må tilkalles umiddelbart.
3. Lad ALDRI et batteri med mindre det er et oppladbart batteri.
4. Ikke bland alkaliske, standard (karbon-sink) eller oppladbare (Ni-Cd; Ni-MH) batterier.
5. Ulike typer batterier eller nye og brukte batterier må ikke blandes. Ikke bland batterier fra forskjellige produsenter, med ulik kapasitet eller størrelse.
6. Batteriene må settes inn med riktig polaritet. Erstatning av et batteri med en feil type kan ødelegge sikkerhetsanordningen. Det er fare for brann eller eksplosjon hvis et batteri erstattes med en feil type.
7. ADVARSEL: Test alarmer for korrekt funksjon ved hjelp av testfunksjonen

hver gang batteriet skiftes ut.

5 Introduksjon av funksjoner

5.1 Alarmmodus

For enheter som er koblet til basestasjonen:

1. Når en alarm utløses, vises en melding i appen, og det sendes en alarmvarsel til smarttelefonen din.
2. Når en alarm utløses, vil alle enheter som er koblet til systemet og basestasjonen, avgi en alarm samtidig.
3. Basestasjonen demper automatisk lyden etter 10 minutter med kontinuerlig alarm. Etter at basestasjonen har stoppet alarmer, vil alle enheter i det sammenkoblede systemet fortsatt varsle.
4. Hvis basestasjonen slås av og kobles fra nettverket, er alle enheter fortsatt sammenkoblet, så når en alarm utløses, vil alle gå av.
5. Volumnivået på basestasjonen kan justeres. Alarmene og basestasjonen kan dempes eksternt via appen. En push-varsel fra appen sendes til telefonen din når røyknivået faller under alarmgrensen.

1. Hvis utløserenheten utløses av røyk:

Når en XS01-M røykalarm utløses i det sammenkoblede nettverket, vil enheten pipe 3 ganger hvert 4. sekund, samtidig som den røde LED-lampen blinker. Alle andre enheter vil følge etter – de vil pipe 3 ganger hvert 4. sekund, samtidig som LED-lampen blinker rødt og grønt etter hverandre (eller bare rødt for XS01-M). Når røykkonsentrasjonen faller under alarmgrensen, vil alarmer stoppe.

2. Hvis den utløsende enheten utløses av CO:

Når en CO-alarm utløses i det sammenkoblede nettverket, vil enheten pipe fire ganger hvert 5,8. sekund, samtidig som LED-lampen blinker rødt. Alle andre enheter vil følge etter – de vil pipe 4 ganger hvert 5,8. sekund, samtidig som LED-lampen blinker rødt 4 ganger først, etterfulgt av LED-lampen som blinker grønt én gang for hvert pip (eller bare rød LED-lampe som blinker for XS01-M). Når CO-konsentrasjonen synker under alarmgrensen, vil alarmen stoppe. For mer informasjon, se «**LED-indikator og hørbar alarm**».

MERKNADER:

1. Når en enhet utløses, vil andre sammenkoblede enheter også utløses. Hvis røykalarmen og CO-alarmen utløses samtidig i nettverket, vil alarmsignalet fra røykalarmen ha prioritet over alarmsignalet fra CO-alarmen.
2. Denne alarmen har en reléfunksjon som utvider det trådløse sammenkoblede nettverket for bred deteksjonsdekning.

5.2 Pause modus

Du kan avstille enheten ved å trykke på test-/avstillingsknappen på enheten eller trykke på avstille-ikonet (rød bjelle med strek over) i appen. Hvis du trykker på test-/avstillingsknappen mens alarmen er aktiv, vil enheten være i pausemodus i 9 minutter. I pausemodus vil den røde LED-lampen blinke en gang hvert 5. sekund. Alarmen går tilbake til normal modus etter 9 minutter.

Når enheten er koblet til basestasjonen

Når en alarm utløses, kan du trykke på avstillingsknappen på basestasjonen for å avstille alle sammenkoblede alarmer unntatt den utløsende alarmen. For å avstille den utløsende alarmen, trykker du bare på test-/avstillingsknapp på enheten. I tillegg kan du trykke på «Silence All»-knappen i appen for å avstille basestasjonen og alle alarmer, inkludert den utløsende alarmen. Du kan trykke på «Locate»-knappen i appen for å finne den utløsende alarmen. Alle enheter vil slutte å alarmere, unntatt den utløsende alarmen. Avstill den utløsende alarmen ved å trykke på avstille-ikonet (rød bjelle med strek over) i appen eller ved å trykke på test-/avstillingsknapp på enheten.

Når du ikke er koblet til basestasjonen

Trykk på test-/avstillingsknappen på en av enhetene for å avstille det sammenkoblede systemet, den utløsende alarmen vil fortsette å pipe. Kun ved å trykke på den utløsende alarmen vil alle sammenkoblede alarmer avstilles.

MERKNADER:

1. Du kan dempe alle sammenkoblede enheter ved å trykke på test-/avstillingsknapp på en av enhetene. Hvis en enhet fortsatt alarmerer, er det den utløsende enheten (enheten som oppdaget faren). For å avstille alle sammenkoblede enheter må du også trykke på test-/avstillingsknapp på den utløsende enheten.
2. Mens enhetene er koblet sammen, kan den utløsende enheten ikke utløses igjen i løpet av de 9 minuttene stillheten varer. Alle andre tilkoblede enheter kan imidlertid utløses igjen hvis de oppdager fare mens pausemodus er aktivert.

5.3 Lavt batterimodus

Den røde LED-lampen blinker en gang hvert 60. sekund, ledsaget av et enkelt pip.

5.4 Feilmodus

Den røde LED-lampen blinker to ganger hvert 60. sekund, ledsaget av to pip.

6 Daglig vedlikehold

Følg disse enkle trinnene for å holde røykvarsleren i god stand:

1. Kontroller at enhetens alarmlyd og indikator fungerer som de skal ved å teste enheten en gang i uken.
2. Røykvarsleren bør rengjøres minst en gang hver tredje måned: Fjern enheten fra taket og rengjør alarmdekselet og ventilasjonsåpningene med en støvsuger med myk børste for å fjerne støv og smuss.
3. Bruk aldri rengjøringsmidler eller andre løsemidler til å rengjøre enheten.
4. Unngå å spraye luftfriskere, hårspray eller andre aerosoler i nærheten av alarmen.
5. Enheten må ikke males. Maling vil tette ventilasjonsåpningene og forstyrre sensorens evne til å oppdage brann.
6. Forsøk aldri å demontere enheten eller rengjøre den innvendig. Dette vil gjøre garantien ugyldig.
7. Når røykvarsleren er fjernet, må den settes tilbake på riktig sted så snart som mulig for å sikre kontinuerlig beskyttelse mot brann.
8. Når rengjøringsmidler eller lignende forurensende stoffer brukes, bør området ventileres.

7 Audiovisuell skjerm

LED-indikator og hørbar alarm

Status		LED-indikator	Hørbar alarm	Handling
Standby-modus		Rød LED blinker en gang hvert 60. sekund.	Ingen	
Alarm-modus	Enheten oppdager røyk og utløser en alarm.	Rød LED blinker 3 ganger hvert 4. sekund.	3 pip hver 4. sekund.	Farlig røykkonstrasjon er oppdaget. Åpne vinduer og dører i nærheten, og gå umiddelbart ut i frisk luft.
	Alle andre enheter som er koblet til nettverket.	1. XS01-M: Rød LED blinker 3 ganger hvert 4. sekund. 2. Enheter med en 2-farget/3-farget LED-indikator: LED-lampen blinker rødt og grønt 3 ganger etter hverandre hvert 4. sekund.	3 pip hver 4. sekund.	Farlig røykkonstrasjon er oppdaget av utløserenheten i nettverket. Finn utløserenheten og iverksett tiltak.

	Enheten har oppdaget røyk og utløst en alarm.	Rød LED blinker én gang hvert sekund i 5 sekunder.	Ingen	Alarmavbrudd: Når røykkonsentrasjonen synker under alarmgrensen, stopper alarmsignalet. Deretter går alarmen tilbake til standby-modus.
Test-modus	Test en enkelt enhet.	Rød LED blinker 3 ganger hvert 4. sekund.	3 pip hver 4. sekund.	1. Trykk på test-/avstillingsknappen på enheten. 2. Trykk på Enhetstestknappen i appen (for enheter som er koblet til basestasjonen).
	Test alle sammenkoblede enheter.	Rød LED blinker 3 ganger hvert 4. sekund.	Kontinuerlig piping til du slipper test-/lydløsknappen.	Starter enhet. Hold inne test-/avstillingsknappen på en enhet i nettverket.

		1. XS01-M: Rød LED blinker 3 ganger hvert 4. sekund. 2. Enheter med en 2-farget/3-farget LED-indikator: LED-lampen blinker rødt og grønt etter hverandre.		Andre sammenkoblede alarmer i nettverket.
Stille modus		Rød LED blinker én gang hvert 5. sekund.	Ingen	Etter 9 minutter går enheten ut av lydløs modus.
Lavt batterinivå		Rød LED blinker én gang hvert 60. sekund.	1 pip hvert 60. sekund.	Bytt batteriet umiddelbart.
Feil		Rød LED blinker to ganger hvert 60. sekund.	2 pip hver 60. sekund.	Alarmen fungerer ikke som den skal. Bytt ut enheten umiddelbart.

8 Feilsøking

PROBLEM	ÅRSAK	LØSNING
Enheten utløses ikke når den testes med røyk.	Røyken når ikke sensoren på riktig måte.	Røyken må komme inn i røyksensoren fra metallnettet på siden for å utløse enheten.
	Tiden er ikke lang nok til at enheten kan oppdage røyk.	Det må være kontinuerlig røyk for at enheten skal utløses. Når røyk når røykføleren, vil enheten utløses etter omtrent 20 sekunder.
	Røykkonsentrasjonen er lav.	Dette produktet bruker en fotoelektrisk sensor som krever tilstrekkelig røykkonsentrasjon for å kunne oppdage røyk. Høyere røyknivåer fører til raskere alarmrespons. Unngå å bruke åpen ild til testing.
Enheten avgir ikke lyd under testing.	Enheten slås ikke på.	Kontroller at batteriets isolasjonsfilm er fjernet og at enheten er slått på. Hvis batteriet er tomt, må det skiftes ut umiddelbart.

	Du trykker ikke hardt nok på test-/lydløsknappen.	Forsikre deg om at du trykker godt på test-/lydløsknappen.
	Enheten er ikke riktig installert.	Kontroller installasjonsposisjonen. Det trådløse signalet kan være blokkert eller utenfor rekkevidde.
Appens push-varsler er forsinket, eller det er ingen push-varsler.	Tillatelse for push-varsler i appen er deaktivert.	Slå på tillatelsen for push-varsler på telefonen.
	Basestasjonen er ikke innenfor nettverksdekningen til ruter.	Avstanden mellom basestasjonen og ruterer bør være innenfor 50 meter. Sørg for at basestasjonen alltid er innenfor ruterens dekningsområde.
	Kommunikasjonen mellom røykvarsleren og basestasjonen er ikke stabil, eller de er for langt fra hverandre.	Reduser hindringene mellom røykvarsleren og basestasjonen. Maksimal avstand mellom enheten og basestasjonen i et åpent miljø er 500 m.

Falske alarmer utløses sporadisk eller når beboerne lager mat, dusjer osv.	Enheten er feil installert.	Installer enheten langt unna kjøkkenapparater, støvete steder, dusjområder og steder hvor temperaturen er over 37,8 °C eller under 4,4 °C. Kontroller plasseringen av alarmen (se « Hvordan installere »).
	Enheten er tilstoppet av smuss og støv.	Rengjør enheten regelmessig (se « Daglig vedlikehold »).
Rød LED-lampe blinker og alarmen avgir 1 pip hvert 60. sekund.	Lavt batterinivå.	Batteriet er svakt. Bytt batteriet umiddelbart.
Rød LED-lampe blinker og alarmen avgir 2 pip hver 60. sekund.	Feil.	Alarmen har en funksjonsfeil. Bytt ut enheten umiddelbart.

9 Erklæring

FORSIKTIG – VEILEDNING OM EKSPONERING FOR RF-ENERGI OG PRODUKTSIKKERHET

1. Før du bruker denne enheten, må du lese denne veiledningen som inneholder viktige driftsinstruksjoner for sikker bruk, kontrollinformasjon og driftsinstruksjoner for overholdelse av RF-energiutsettelsesgrenser i gjeldende nasjonale og internasjonale standarder.
2. Brukerinstruksjoner skal følge med enheten når den overføres til andre brukere.

Enkel EU-samsvarserklæring

X-Sense Electronics Co., Ltd. erklærer at radioutstyret er i samsvar med de grunnleggende kravene og andre relevante bestemmelser i CPR-forordning (EU) 2024/3110 og RED-direktiv 2014/53/EU og RoHS-direktiv 2011/65/EU og WEEE-direktiv 2012/19/EU. Den fullstendige teksten til EU-samsvarserklæringen er tilgjengelig på følgende internettadresse: www.x-sense.com.

Miljøbeskyttelse

Det overkryssede hjul- og beholder-symbolet på produktet, i dokumentasjonen eller på emballasjen minner deg om at alle elektriske og elektroniske produkter, batterier eller akkumulatorer må leveres til utpakte innsamlingssteder når de er defekt. Ikke kast disse produktene som usortert kommunalt avfall. Avhend dem i henhold til lover og regler i ditt område.



10 Produsent og serviceinformasjon

10.1 Produsent

X-Sense Electronics Co., Ltd.

Address: B4-503, Kexing Science Park, 15 Keyuan Road, Shenzhen, 518057,

CHINA

support@x-sense.com

10.2 Importør

X-Sense Europe B.V.

Parellaan 2H

2132WS Hoofddorp

Netherlands

10.3 Norsk kontakt og support

Støk Handel AS

Holsletta 14

2032 MAURA

Tlf. 64009454